 
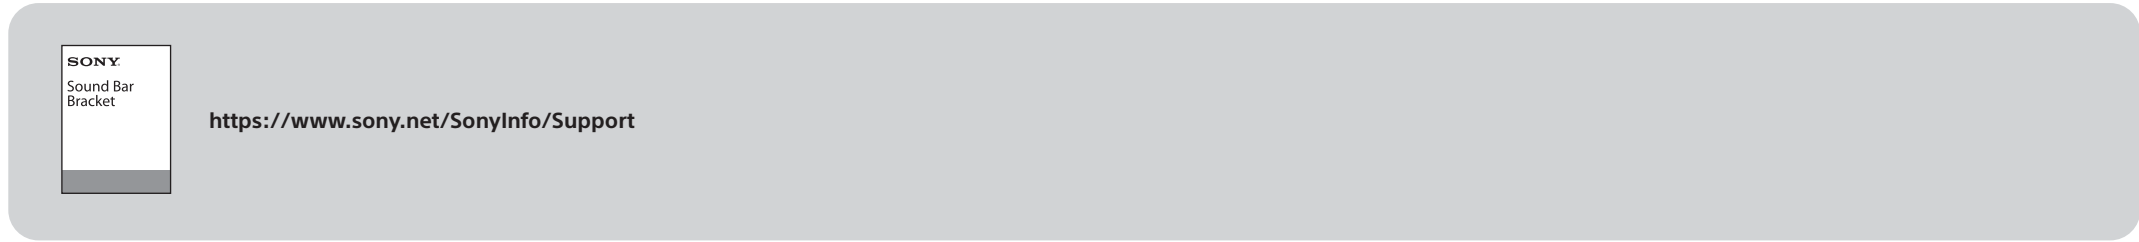 
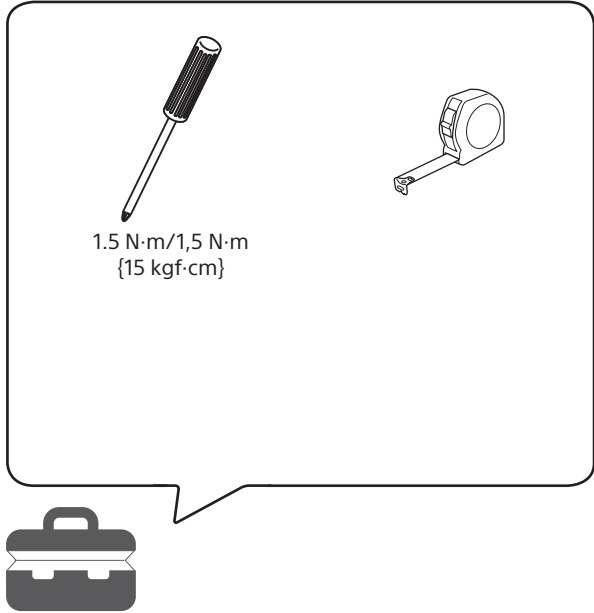 
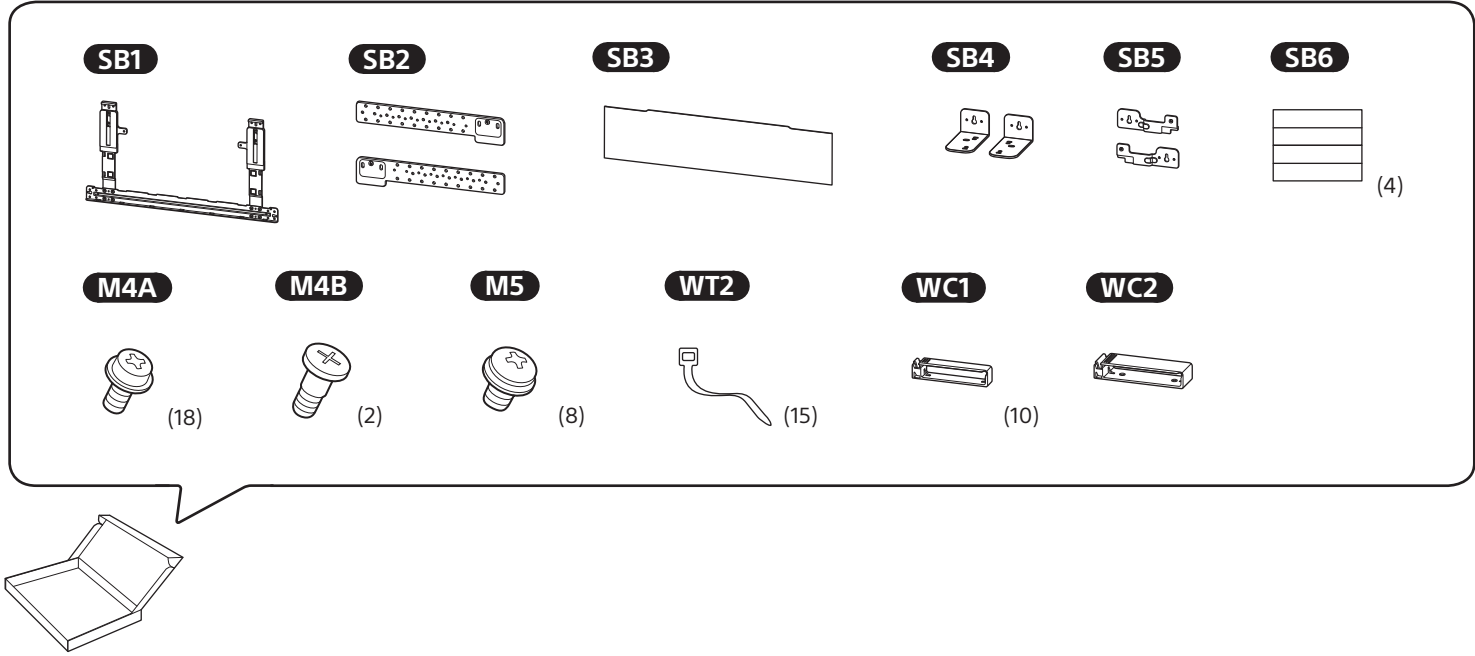 


EE	Paigaldusjuhend	HR	Vodič za postavljanje
LV	Uzstādīšanas norādījumi	KZ	Орнату нұсқаулығы
LT	Montavimo vadovas	SR	Vodič za instalaciju
SI	Namestitveni vodič	HE	מדריך התקנה

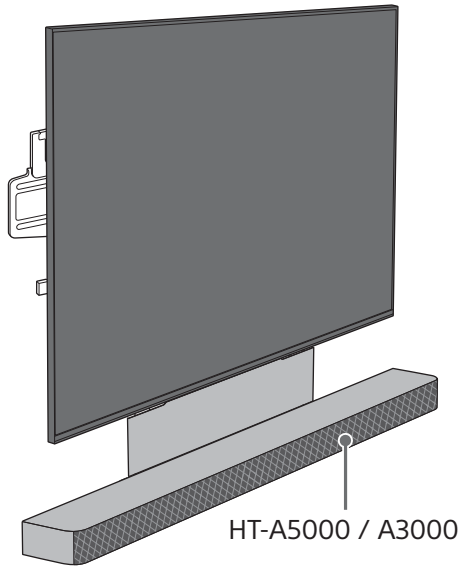


1

1

(A)	(B)	~35	35 ~ 50	55 ~ 60	55 ~ 65	65~
85 ~ 95	8	8	8	7	6	6
95 ~ 105	8	8	7	6	5	5
105 ~ 115	8	7	6	5	4	4
115 ~ 125	7	6	5	4	3	3
125 ~ 135	6	5	4	3	2	2
135 ~ 145	5	4	3	2	1	1
145 ~ 155	4	3	2	1	0	0


 
(mm) / (mm) / (mm)

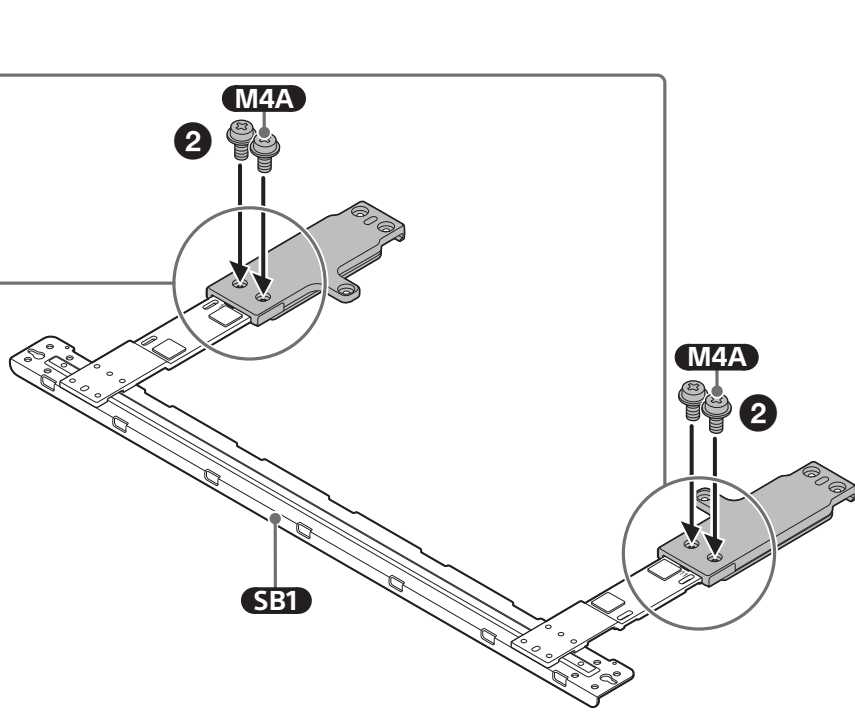

2


1

HT-A5000	C
HT-A3000	H

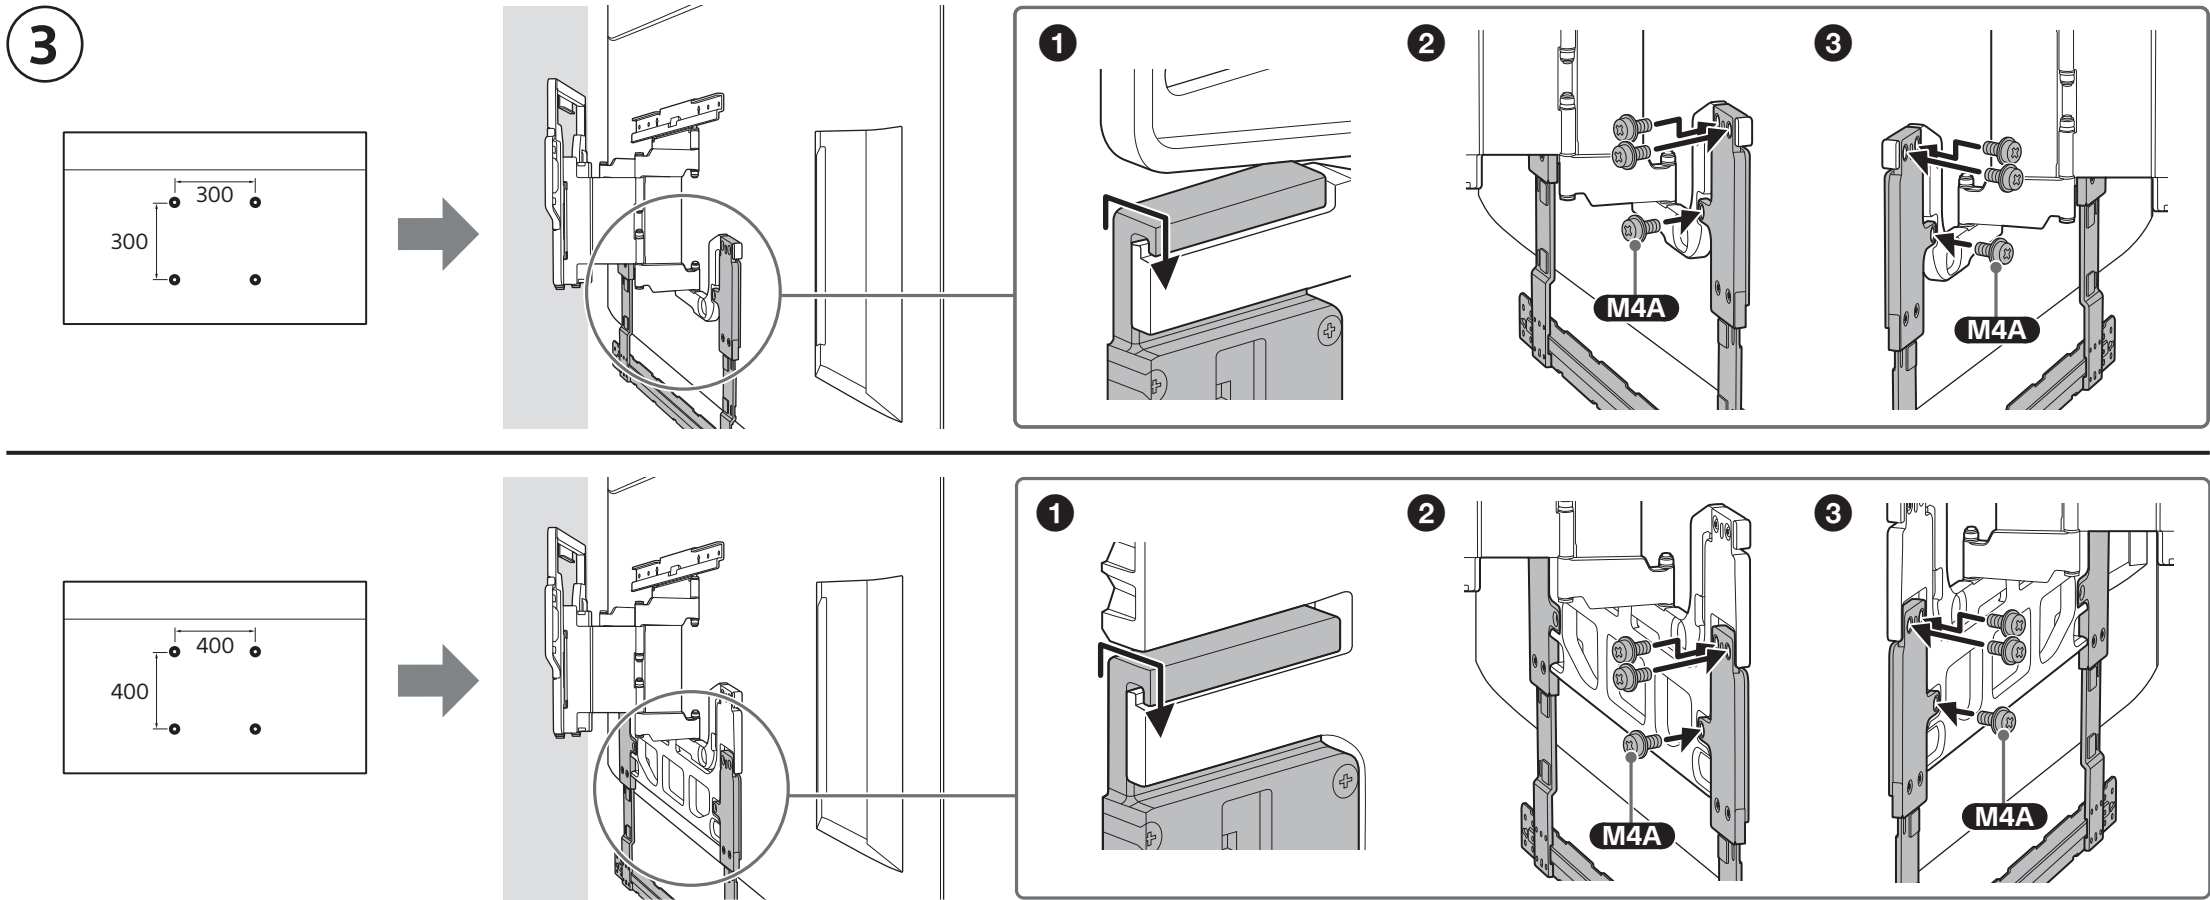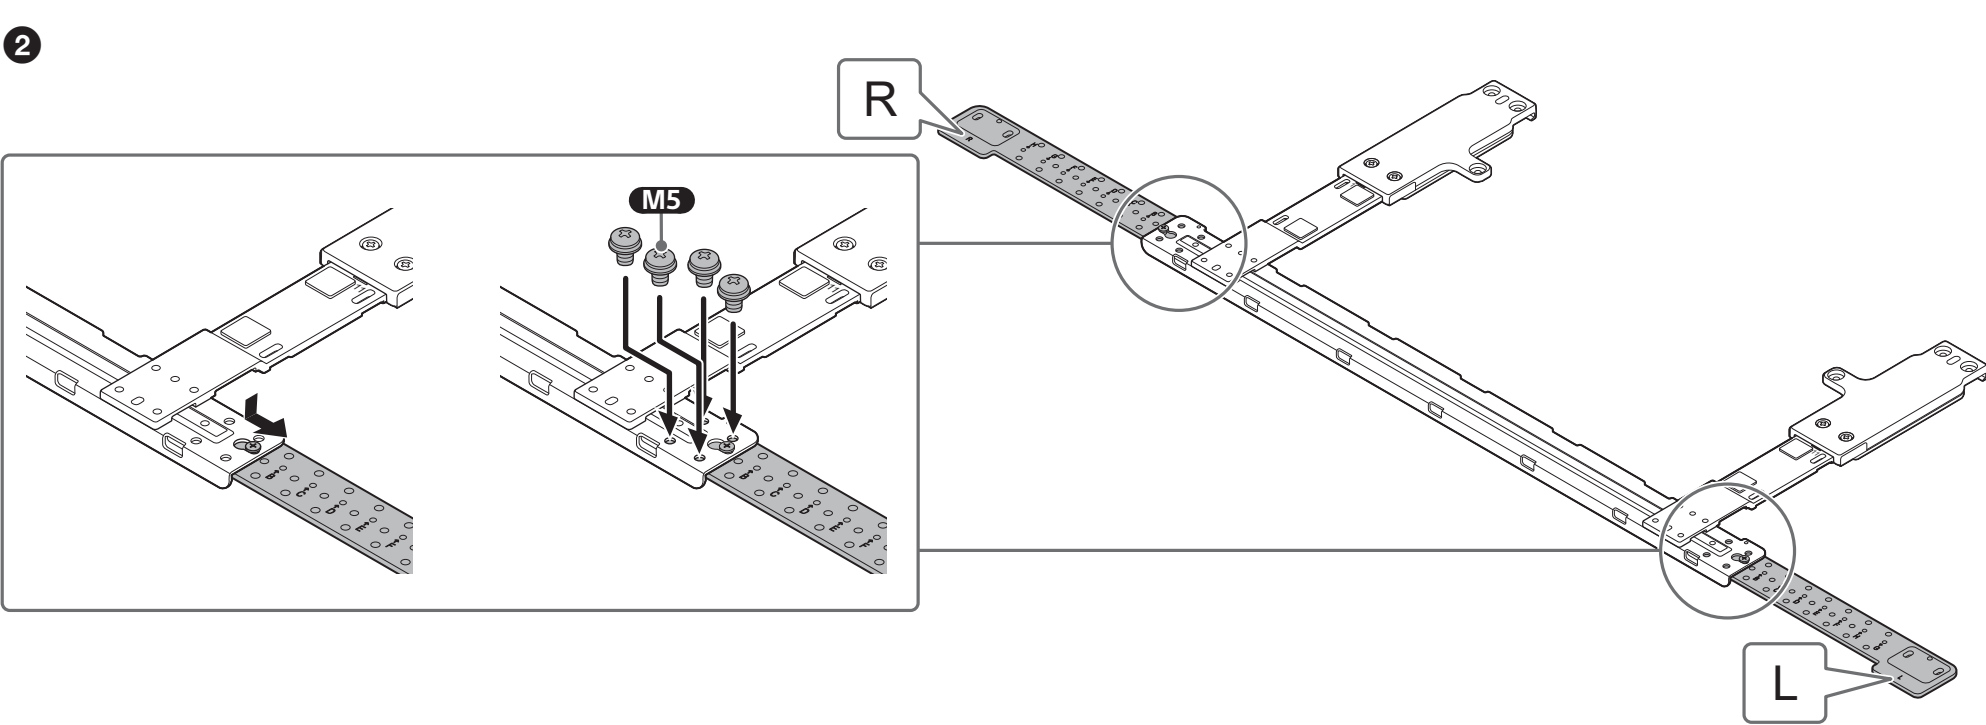  


4

 
HT-A5000

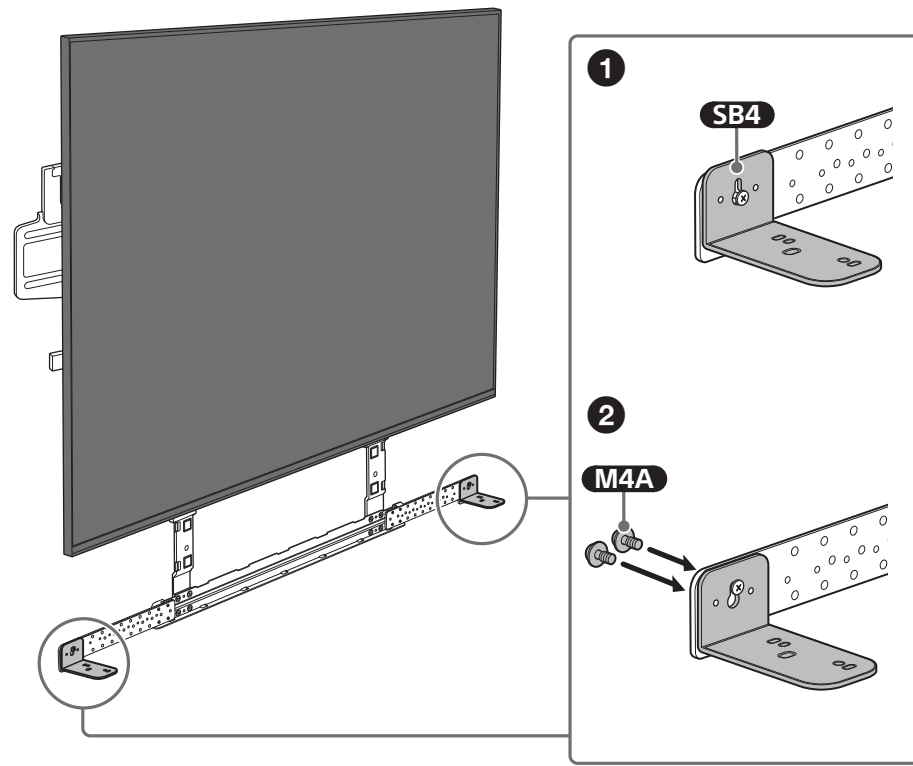

HT-A3000

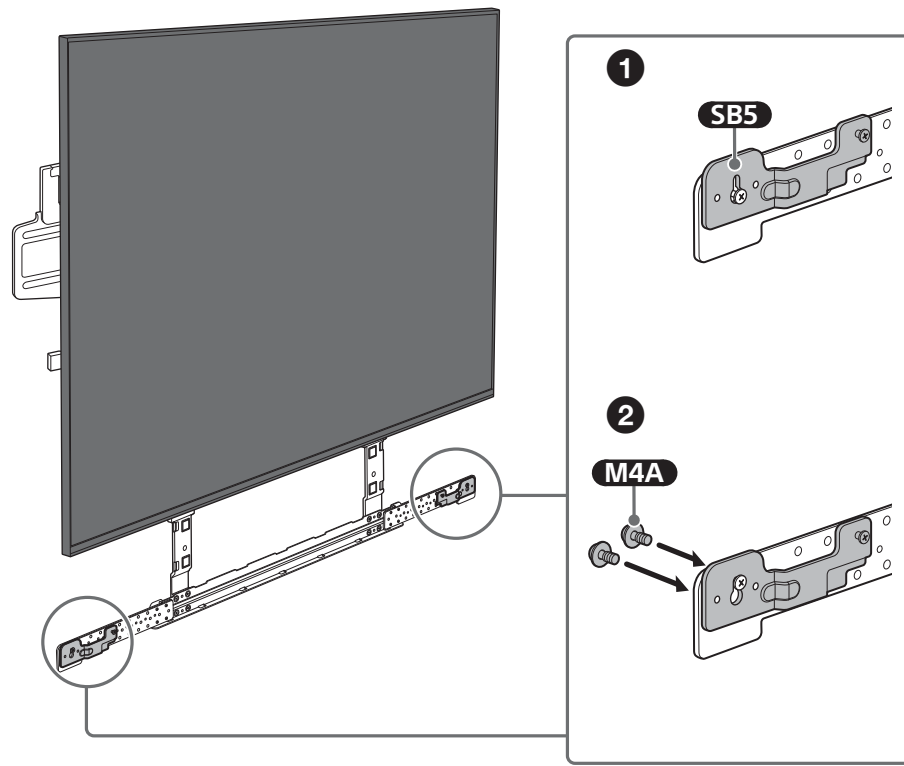 


5

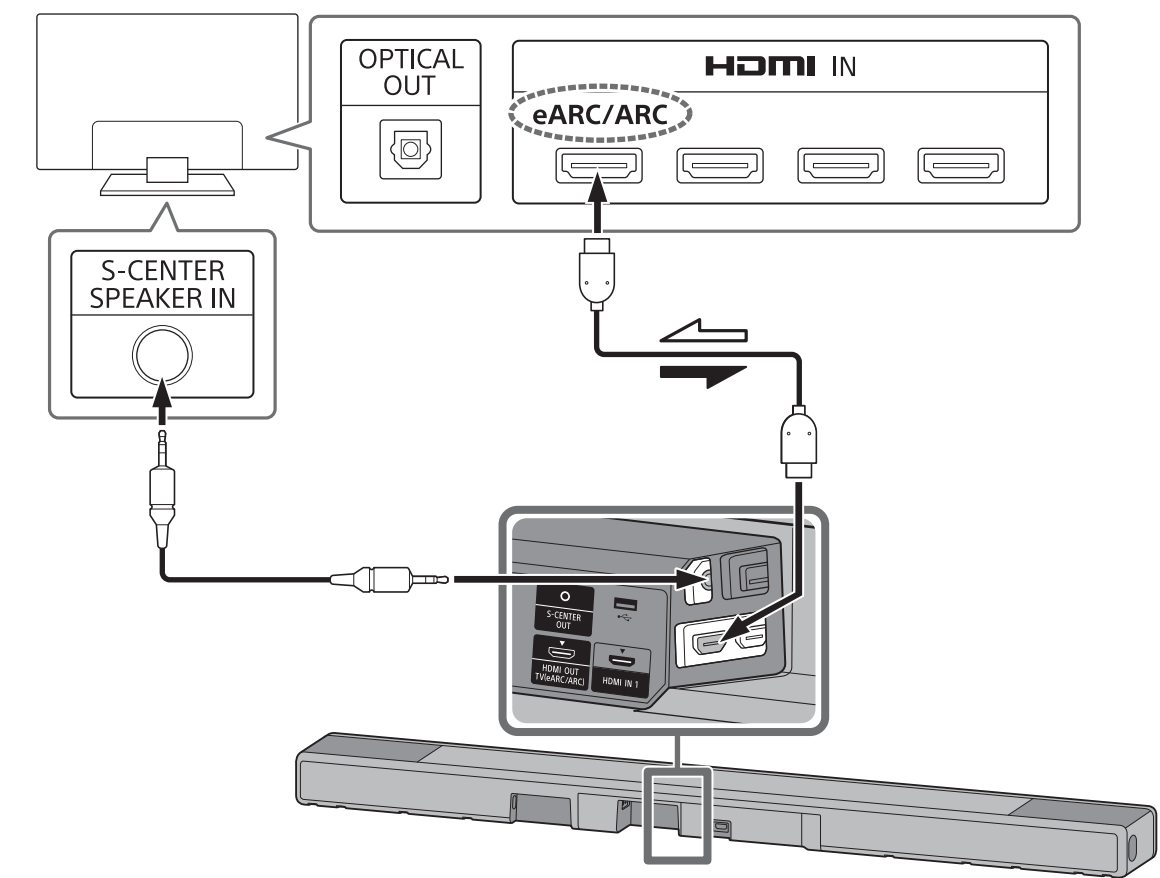 


6

 
HT-A5000

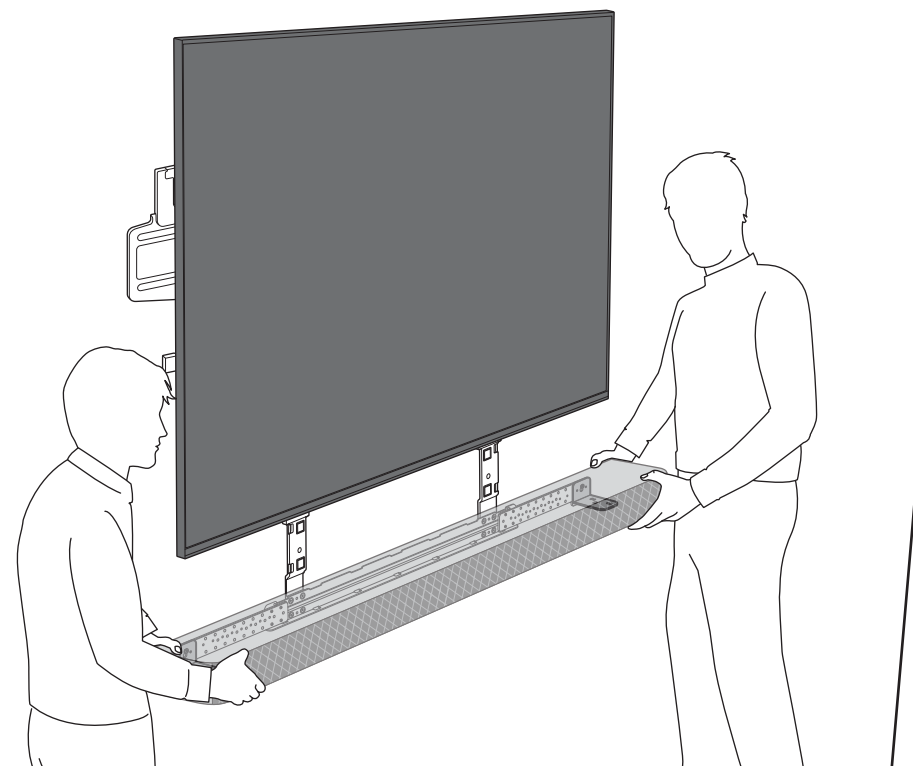


HT-A3000

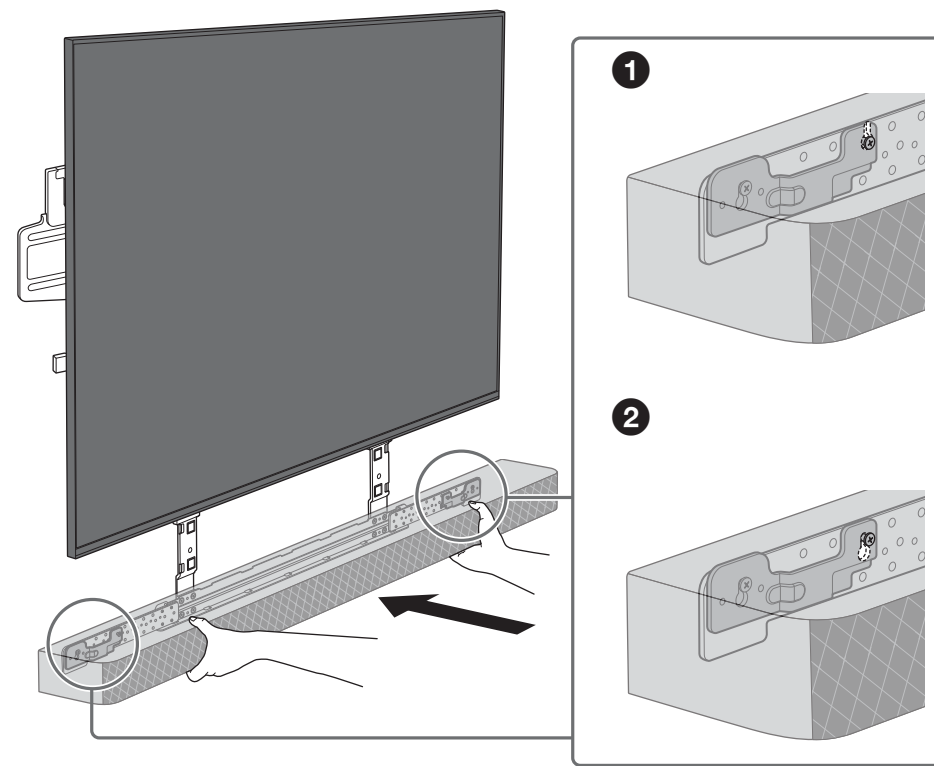 

7

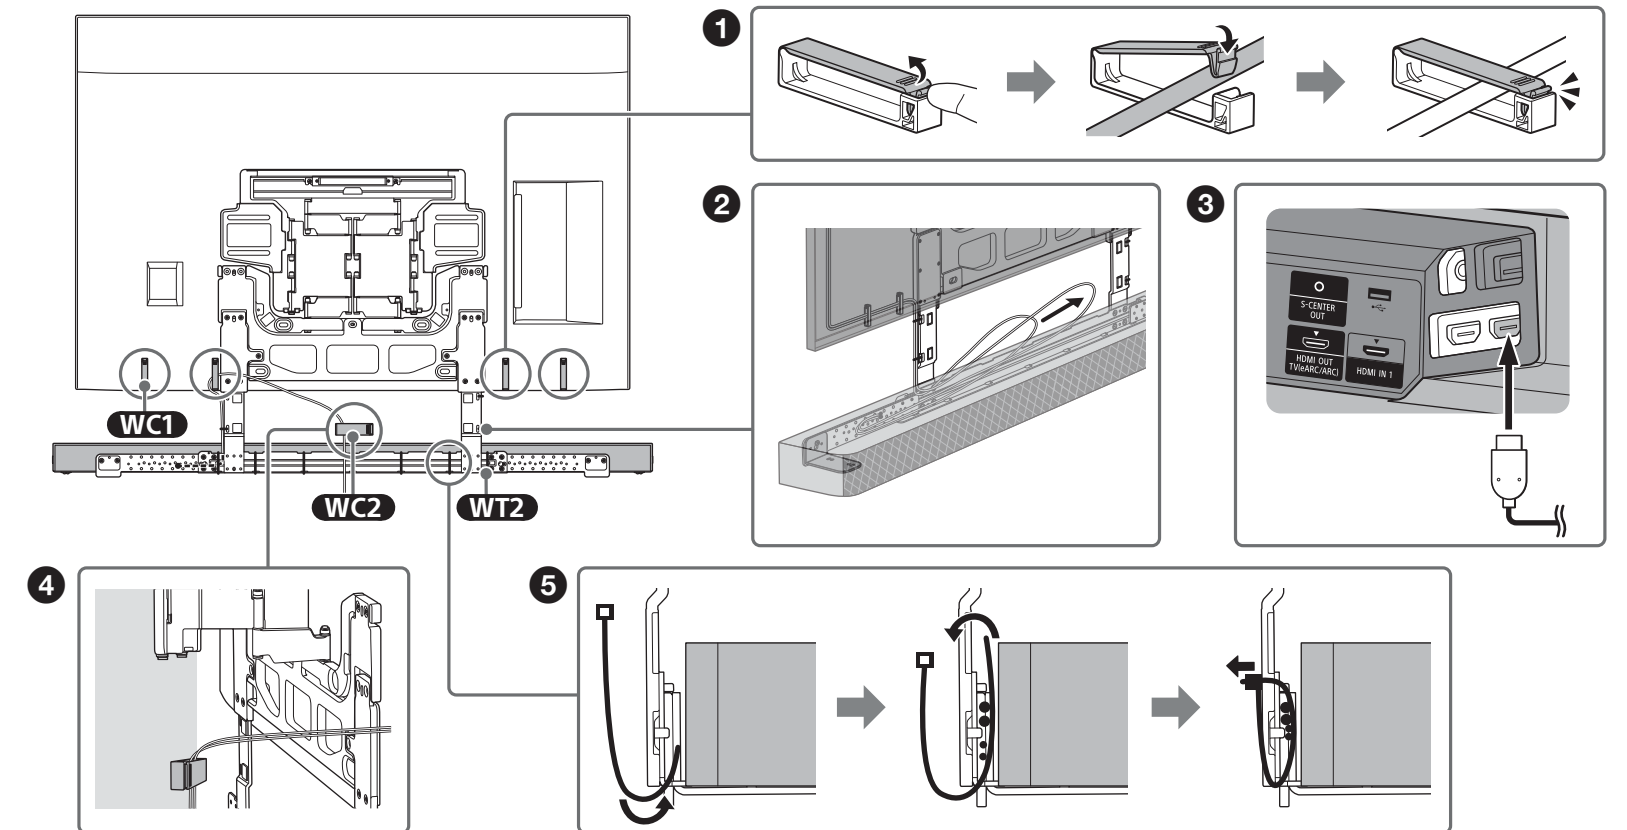 


8

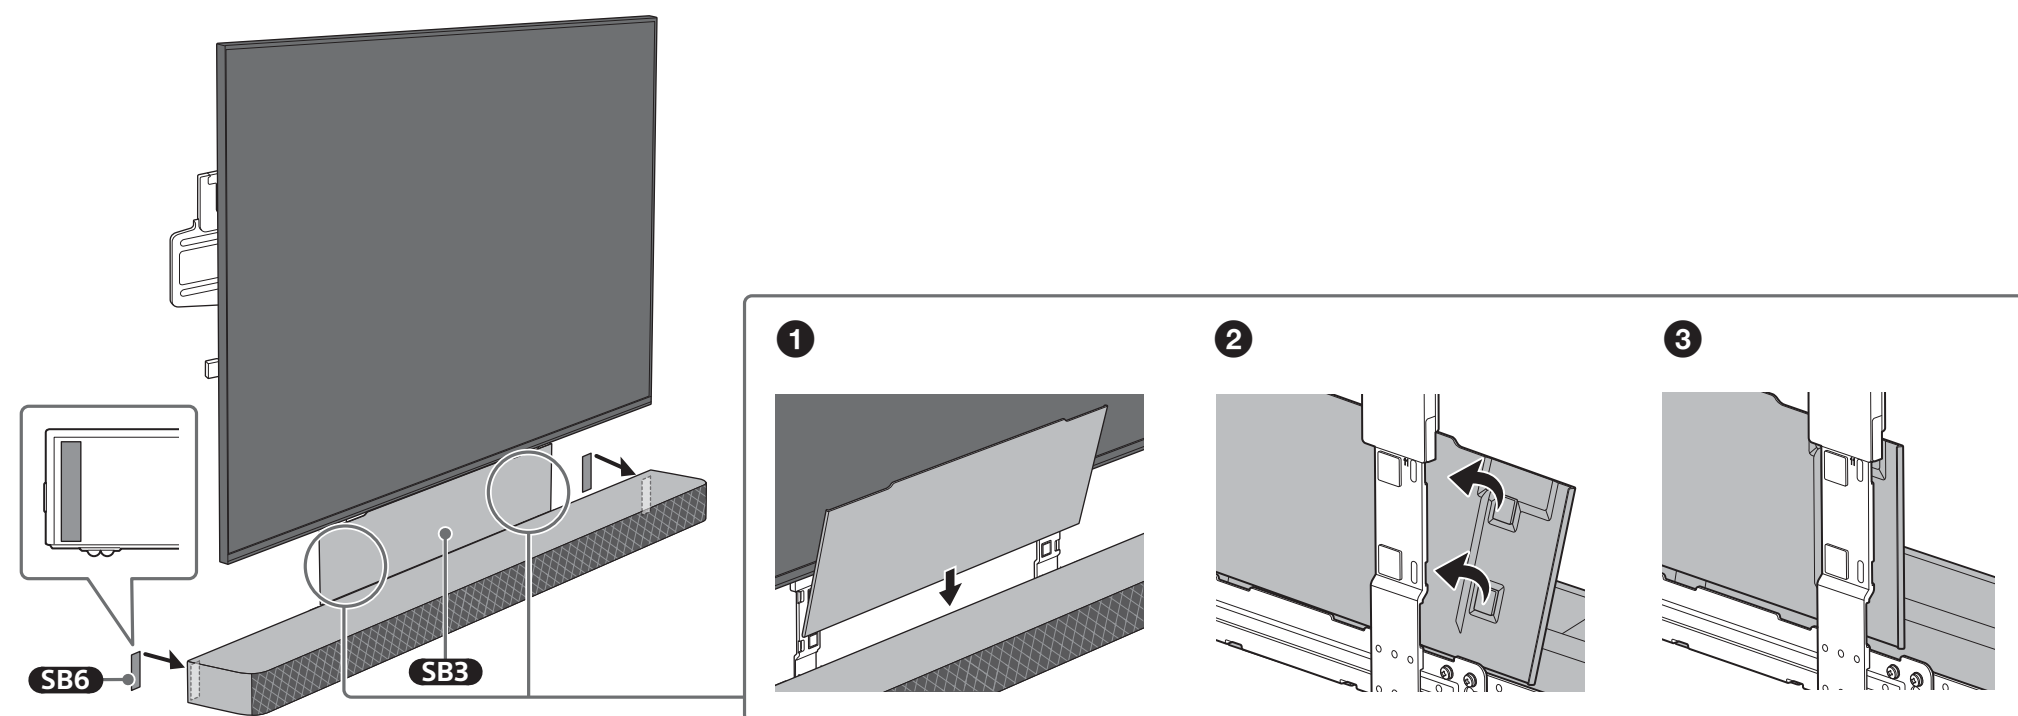 

9

 HT-A5000

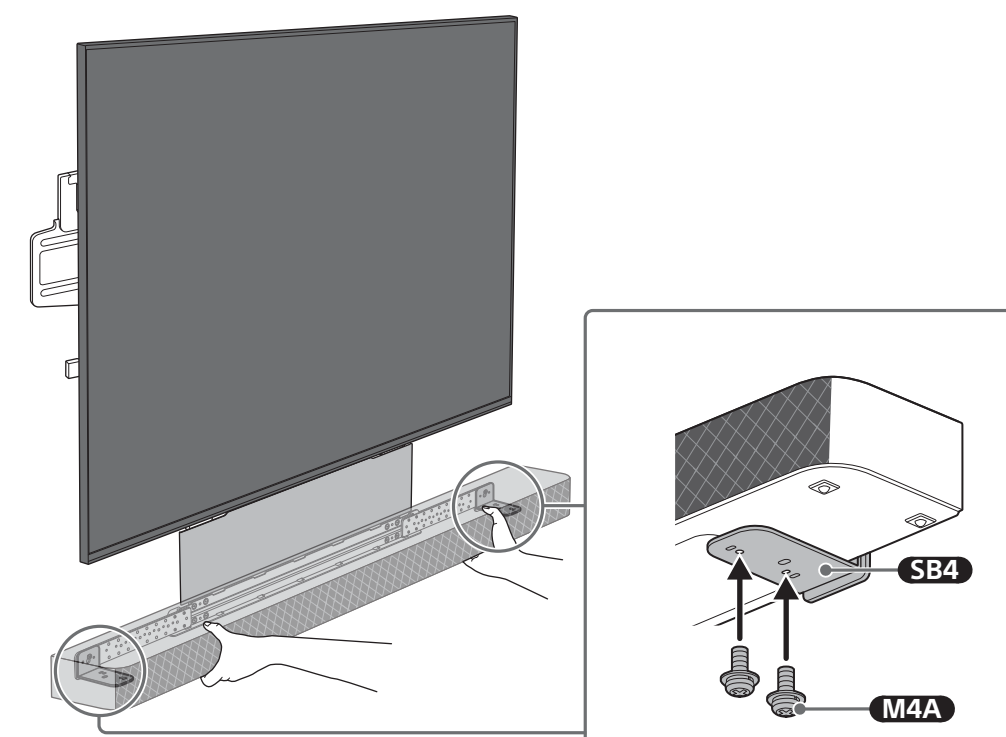

10

