

LOGO

INSTRUCTION MANUAL

MODEL NO.: HB-7807



220-240V~ 50/60Hz 2200W

Please Carefully Read This Instruction before Use

PARTS DIRECTORY



Read all instructions before using

1. Use the iron only for its attended use.
2. To protect against the risk of electric shock, do not immerse the iron in water or other liquids.
3. The iron should always be turned to "min" before plugging or unplugging from the mains outlet. Never pull the cord to disconnect from the mains: instead, grasp plug and pull to disconnect.
4. Do not allow the cord to touch hot surfaces. Allow the iron to cool completely before putting away.
5. Always disconnect the iron from the electrical outlet when filling with water or emptying and when not in use
6. Do not operate the iron with a damaged cord or if the iron has been dropped or damaged. To avoid the risk of electric shock, do not disassemble the iron .take it to a qualified service agent for examination and repair. Incorrect re-assembly, can cause a risk of electric shock when the iron is used.
7. Close supervision is necessary for any appliance being used by or near children. Do not leave the iron unattended when connected to the mains or on an ironing board.
8. Burns can occur from torching hot metal parts, hot water or steam, use caution when you turn a steam iron upside down-there may be hot water in the reservoir.
9. If the iron is not operating normally, disconnect from the power supply. And contact the nearest authorized service agent.
10. Your iron is designed to rest on the heel. Do not leave the iron unattended when switched on. Do not place the iron on an unprotected surface even if it is on its heel rest.

11. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
12. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been give supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Child shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
13. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.

OPERATION

Classify the clothing according to the labels attached thereto before use Speed of the iron-heating is quicker than its cooling So shall begin ironing the clothes which requires a lower ironing temperature first(synthetic fibre fabric and silk),and then iron the clothes of other materials requiring for higher te mperature in proper order, (woolen, cotton and jute etc.)

Place the iron vertically and set the temperature knob at MIN.

Insert the plug into the socket, turn the temperature knob to temperature point required by the clothes material and aim the material identify mark at the heating indicator May start ironing when the indicator lamp turns off.

FILLING WITH WATER

Remove the mains plug from the wall socket before filling(or emptying) the iron with water. Set the steam control to 0 position(if have steam function) in order to avoid water leakage.

Fill the filling cup with water . Hold the iron in a titled position and put the water into the iron with normal tap water when using it for the first time.

For refilling, you can also use tap water. However, if the water is very hard, it is advisable to use the distilled water.

Do not put vinegar, starch, chemically descaled water or descaling agents in the water reservoir!


STEAM IRONING

Connect the iron to a suitable power supply outlet after the tank has been filled.

Adjust the temperature knob to the wool cotton and jute range accordingly. Place the iron vertically. After the pilot light turns off, switch on the steam button

For the setting relation between the temperature knob and the steam push button, see the following table:

SETTING THE TEMPERATURE

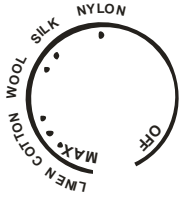

- ⊙ Nylon/silk(Low temperature)
- ⊙ ⊙ Silk wool(medium temperature)
- ⊙ ⊙ ⊙ Linen/cotton(high temperature)

The weighty iron in the main body makes the iron heavier, and this can enhance the ironing effect.

BURST OF STEAM

This function provides an extra amount of steam to remove stubborn wrinkles

fill the iron with water

turn the temperature control to the position “MAX”

the pilot light turns off when the required temperature is reached

the iron is ready for use

press the burst of steam button once

steam will penetrate into the garment to remove the wrinkles

wait a few seconds before pressing the steam control knob again when there are stubborn wrinkles

usually all wrinkles can be removed within three pressings

SAFETY PROTECTIVE CUT-OUT

In the unlikely event of the thermostat failing, the protection cut-out will operate to prevent the iron overheating.

Then the iron should be taken to the nearest authorized service facility.

STORAGE CARE

Turn the temperature knob to MIN and unplug the power store the iron after it is cool completely.

For storage, place it vertically, and never horizontally with the bottom downwards.

Avoid ironing over zippers/rivets on jeans etc. These can scratch the soleplate.



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.