



Warning

If the outer foil is deformed or damaged, please do not use it again, or it may cause skin irritation.

The outer foil and inner blade has fixed life. In order to obtain best result, we recommend you replace the outer foil and inner blade regularly.

Please do not charge at the place with temperature lower than 0 °C (104 °F), direct sunlight or near heat or humid source.

Please use the matching adaptor in the package.

Please dry the shaver before charging.

Keep the shaver far away from water source, keep your hands dry during the course of charging.

When you unplug the power cord from AC power supply, pull too hard may damage the appliance.

Store the adaptor to dry place as to avoid damage.

Do not pull, twist or bend the adaptor seriously.

Do not twist the power cord firmly to the appliance.

Outer foil improper operation will result easy damage. To avoid man-made damage, please do not use damaged outer foil or inner blade.

Please do not remove the shell, or it may result in damage for improper operation.

Do not shave in the shower.

Put it to the place out of reach of children.

Keep the instruction to safe place.

Please contact the authorized after-sale service for any maintenance and damage question.

Children under 8 is not allowed to use this product, or the person with physiological malady or mental disease or lack of experience shall be supervised to operate this products, and shall be informed of relevant dangers.

Children shall not play with products.

Children shall not clean and repair this product without supervision.

Keep the equipment dry when you no longer use.

The discarded battery shall be removed from the shaver.

Before removing the battery, you must unplug the power cord, make sure the product has been disconnected, otherwise it will likely cause electric shock.

Safely dispose the battery.

Explanation on charge

Stop to use the shaver if it lost power, charge it for 8 hours, the shaver could be used for about 50 minutes after fully charged.

Recommendation: the shaver can continue to use about 50 minutes after fully charged, but we recommend you charge the shaver when continuous use for 45 minutes or you feel about power down, you may not wait to be completely discharged when charging, it helps to extend the life of shaver.

Attention during the charging course:

- Never use this shaver in the bathroom or shower room.
- Charge the appliance in a location where it will not be exposed to direct sunlight or other heat sources, at temperature of 5°C to 35°C.
- Plug the adaptor into a household main socket where there is no moisture and handle it with dry hands.
- Do not damage or deform the adaptor, do not place heavy objects on the adaptor.
- Do not use the appliance if the adaptor or power cord is worn, or if the power cord does not fit snugly in the shaver coupling.

Charging the appliance:

- Insert the power cord to the power terminal of the shaver (See page 3, fig 2).
- Plug the adaptor into household main socket (See page 3, fig 3).
- When the charge connection is normal, the shaver indicating light turns on, the charge indicating light must turn on during the course of charge. If the light fails to turn on, please try again and make sure normal charge.
- Please break off the adaptor after 8 hours' charge.

Attention: when you make first charge or the shaver is out of use over 3 months, please charge for 16 hours, or the product cannot be started or used normally.

How to use

Please read the safe instruction carefully before using our shaver.

- Press the power switch to turn off the shaver (see page 3, fig 1).
- Please check and make sure the blade is not damaged or with other foreign matters.
- Push the power switch to "ON" to turn on the shaver (see page 3, fig 1).
- Please apply the blade above shaver to shave your face or neck (See page 3, fig 2).

Advocate: hereby we provide several comfortable shaving skills for your reference.

- Recommend shave ten minutes after wake up and confirming no edema of face.
- Please shave along the growth direction of beard, keep the foil is perpendicular to skin, such operation is aim to obtain better effect.

Important: during the course of shaving, please do not apply the foil too heavy on your skin, which may cause outer foil damage, and even hurt your skin. (such as burning sensation, numbness or pain)

Explanation on size trimmer

Important: size trimmer is generally used to the beard or hair longer than 5 mm.

- Push the power switch to "ON" to turn on the shaver (see page 3, fig 1).
- Press the trimmer button, enable it enter into working (see page 3, fig 4).
- Trim the medium and long beard or hair (see page 3, fig 5).
- Push the power switch to "OFF" to turn off the shaver (see page 3, fig 1).

Pay attention to following points before cleaning

- Ensure the shaver is turned off and the power cord is cut off.
- Please clean the shaver surface with wet cloth, do not use cleaner or chemical substance.
- Wipe the shaver surface with dry cloth, do not use blower or other dry heat exchanger.
- The shaver should not be cleaned by immersing into water.

Explanation on cleaning

- Push the power switch to "OFF" to turn off the shaver (see page 3, fig 1).
- Disconnect the power cord is connected with shaver (see page 3, fig 17, fig 18).
- Press the release button on front of shaver and open head assembly.
- Tap out excess hair shavings (see page 8, fig 8).
- Rinse the head of the shaver in running water (see page 3, fig 9).
- Close head assembly after cleaning (see page 3, fig 10).

Generally, the shaver head should be deep cleaned after using for 30 times (300 minutes), it is in favor of use life of head and the shaving efficient.

- Perform the daily cleaning steps 1 and 2.
- Place a drop of liquid soap on the inside near each cutter (see page 3, fig 11).
- Brush the soap out thoroughly with the supplied cleaning brush (see page 3, fig 12).
- Detach the head, unscrew the lock according to the direction marked in the lock (see page 3, fig 13), then remove the lock bracket (see page 3, fig 14), remove and separate each head assembly one by one (see page 4, fig 15 fig 16), then clean the suds and hair residue with cleaning brush and water, install the head assembly according to above reverse steps, cover the head assembly to complete deep cleaning.
- Clean the shaver with liquid soap after separating each component according to above steps.

Comments

- Service life of foil: supposed the shaver is used 4 times one month, and each time 20 minutes, the service life is 3 years.

Attention:

- If you feel foil or inner blade become dull during the course of shaving, (obvious pulling feel), you need to replace foil or inner blade.
- We recommend you clean the mustache bit in the outer foil and inner blade with brush, or it may cause service life reduce of outer foil or bad effect.
- Whether you use the shaver all the time, please charge at least once every 6 months, ensure the battery activation, as to prolong the service life of battery.
- please remove the battery when you discard the product (see page 4, fig 21).